Metro® Mightylite™

Insulated Food Carrier Accessories



Heavy-duty high density polyethylene (HDPE) construction fastened to 0.100" (2.5mm) thick aluminum caster channels with rugged 5/16" (8mm) stainless steel tie down anchors. Plate mounted casters, 2 swivel and 2 swivel with brakes. 5" (127mm) diameter donut neoprene wheels. Load capacity 350 lbs. (158kg) per dolly. Includes 1" (25mm) x 15' (457 cm) long cam buckle strap with hooks. Dolly is designed to transport carriers or milk crates. Stores on top of carrier to save space.



		Dimensions (W x D x H)		Product	Shipping	Shipping
Cat. No.	Description	(in)	(mm)	Weight	Weight	Volume
MLD1	Dolly for ML300, 400, 180, 180XL (Includes Strap)	20.7 x 29.8 x 9.5	524 x 756 x 241	19.0 lbs. (8.6 kg)	20.0 lbs. (9.1 kg)	3.5 ft ³ (0.99m ³)

Thermal Partition (MLP1)

1.5" (38mm) thick insulated partition helps avoid accelerated food temperature loss or gain inside partially full carriers by minimizing empty space inside the carrier. Also use to separate hot and cold food in one carrier. Lightweight, insulated, durable expanded polypropylene (EFF) construction.






		Dimensions (W x D x H)		Product	Shipping	Shipping
Cat. No.	Description	(in)	(mm)	Weight	Weight	Volume
MLP1	Thermal Partition for ML300, 400, 180, 180XL	13 x 21 x 1.5	330 x 533 x 38	0.8 lbs. (0.4 kg)	1.5 lbs. (0.7 kg)	0.3 ft ³ (0.01m ³)

Wire Caddy (MLC1)

Can be used to hold hot and cold packs to extend holding times, as a support for disposable aluminum pans, or to organize and transport common items such as quart containers. Epoxy coated. One included with every front-load carrier.



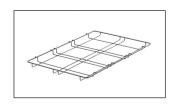

		Dimensions (W x D x H)		Product	Shipping	Shipping
Cat. No.	Description	(in)	(mm)	Weight	Weight	Volume
MLC1	Wire Caddy for ML300, 400	13 x 21 x 1	330 x 533 x 25	1.3 lbs. (0.6 kg)	2 lbs. (0.9 kg)	0.3 ft ³ (0.01m ³)

All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation

L02-221 Printed in U.S.A.

Metro® Mightylite™ Insulated Food Carrier Accessories



Heater (MLH1, MLHX1)

Stainless steel, add-on carrier heater with polymer handles and rubber feet. Great for applications where carriers are frequently accessed or not 100% full, or simply when added heat is desired to keep food hotter, safer, and more appetizing. Thermostatically controlled, reaches max temperature in approximately 10 minutes. Approximate top-center surface temperature range from 150°F (66°C) to 200°F (94°C). 72" long, permanently attached power cord with cord wrap. Power indicator lights up when plugged in.









			Dimensions (W x D x H)		Shipping	Shipping
Cat. No.	Description	Electrical Specifications	(in)	(mm)	Weight	Volume
MLH1	120V Heater for ML300, 400, 180, 180XL	120V, 200W, NEMA 5-15P	20.6 x 12.4 x 1.6	524 x 315 x 40	9.2 lbs (4.2 kg)	0.3 ft ³ (0.01 m ³)
MLHX1	240V Heater for ML300, 400, 180, 180XL	240V, 200W, NEMA 6-15P	20.6 x 12.4 x 1.6	524 x 315 x 40	9.2 lbs (4.2 kg)	0.3 ft ³ (0.01 m ³)

Serving Ring (MLW1)

For use with top-load carriers and heater to transport & serve with a single solution that does not require water or canned fuel. Wire serving ring can also be used without carrier with chaffing pan and canned fuel. Accommodates full & fractional sized pans, and non-pan items such as individually portioned meals. Epoxy coated wire construction.









			Dimension	s (W x D x H)	Product	Shipping	Shipping
	Cat. No.	Description	(in)	(mm)	Weight	Weight	Volume
ML	W1	Serving Ring ML180, 180XL	21.7 x 12.8 x 7.8	551 x 325 x 199	3.7 lbs (1.7 kg)	4.7 lbs (2.1 kg)	1.4 ft ³ (0.04 m ³)

Carrying Strap (MLS1)

Heavy-duty adjustable strap, designed to work with top-load and front-load carriers. Detachable handles can be quickly re-configured for one-handed or two-person carrying. 1" (25mm) wide, high-strength polyester webbing with low water absorption properties. Box sewn stitch pattern with durable polymer / metal hardware





Cat. No.	Description	Shipping Weight	Shipping Volume	
MLS1	Carrying Strap for ML300, 400, 180, 180XL	0.5 lbs (0.23 kg)	0.2 ft ³ (0.005 m ³)	Ī

an Ali Group Company

