



We put space to work.

Item # _____

Job _____

qwikSIGHT™ Basket Supply System

Quick to find, quick to access, quick to retrieve,
quick to restock the supplies that you need.

- **Cleaner Containment:** Open wire basket contains supplies, provides better light penetration and prevents dust accumulation.
- **Better Accessibility:** Cantilever design provides open access to see and access stored contents. Baskets can be angled, especially at higher levels, to provide easier access to stored items.
- **Better Visibility:** Absence of front posts and the waterfall effect of narrow baskets placed directly above deeper baskets provides more visibility to stored contents.
- **Durable Construction:** Structure has three crossbars on single sided units and four on double, to keep uprights parallel and keep the structure square during daily use and after incidental contact. Bottom dust cover is directly supported by structure for years of trouble free use.
- **Organized Storage:** Snap in dividers, available in 12" (305mm) and 18" (457mm) depths, fit flush with basket floor to organize contents without snagging supplies in the basket below.
- **Protective and aesthetic:** Uprights have a durable baked on epoxy coated finish in an attractive light taupe color. Baskets are coated with a thicker layer to soften the wire ends and eliminate sharp edges.
- **Easy Adjustability:** Numbered uprights allow for quick, tool free, adjustment at 1" (25mm) intervals along the entire height of the upright.
- **Flexible Configurations:** Single sided or space saving double sided for back to back configurations. Stationary or mobile to make cleaning easier. Space efficient direct mount caster configuration or extension bars to increase stability when moved.
- **Adaptable Basket:** Unique baskets can be mounted to qwikSIGHT uprights or hung on louvered wall panels.
- **Accessories:** Full length clear label holders or colored label holders help to quickly locate and identify needed accessories. Slanted shelves, wall panels and hooks provide an added level of organization.



All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA 18705
Product Information. U.S. and Canada: 1.800.992.1776
Outside U.S. and Canada: www.metro.com/contactus

L02-199
Printed in U.S.A. 4/21

Information and specifications are subject to
change without notice. Please confirm at time of order.

Copyright © 2021 InterMetro Industries Corp.



qwikSIGHT™
Basket Supply System

18.01



qwikSIGHT™ Basket Supply System

Specifications

- **Frame:** 1" x 2" (25mm x 51mm) epoxy-coated steel tubing uprights, notched and numbered on 1" increments for easy basket adjustment. Three 1/2" x 2" (13 x 51mm) epoxy-coated steel cross bars — two mounted on vertical upright, one mounted on bottom horizontal section to maintain a parallel, rigid structure. Frames are 74" (1880mm)H and available single sided, 21 1/2" (546mm)D or double sided 40 1/2" (1029mm)D. Four bars are provided on double-sided units.
- **Dust Cover:** Solid, epoxy coated steel, directly supported by steel frame to provide stable, rugged performance.
- **Color:** Light Taupe
- **Stationary or Mobile*:** Stationary units include four levelers to compensate for uneven floor surface. Mobile units use four 4" (102mm) diameter brake casters to fix units in place. Casters can mount direct to frame to reduce footprint and maximize storage efficiency or use optional caster extension bars to increase stability when moving*.
- **Baskets:** Wire baskets are constructed with 1/2" (13mm) grid spacing, with a thick epoxy finish to cover wire ends and prevent sharp edges. Baskets include brackets that can be installed along 1" (25mm) notches in upright at one of three positions, horizontal, 11° or 21° upward slant. Available in 12" (305mm) or 18" (457mm) depths and 18" (457mm), 36" (914mm) or 48" (1219mm) lengths. Baskets accept optional dividers and label holders.
- **Weight Capacity:** 100 lbs. (45kg) per basket, 375 lbs. (170kg) per mobile unit, 500 lbs. (227kg) per stationary unit.

Model No.	Description	Dimensions (Depth x Width)		Height		Approx. Pkd. Wt.	
		(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
Single Sided — Frames with Dust Cover**							
QB1874-1	18"L Single-Sided Starter	21 1/2 x 19 1/2	546 x 495	74	1880	36	16
QB3674-1	36"L Single-Sided Starter	21 1/2 x 37 1/2	546 x 953	74	1880	46	21
QB4874-1	48"L Single-Sided Starter	21 1/2 x 49 1/2	546 x 1257	74	1880	56	25
QB1874-1A	18"L Single-Sided Adder	21 1/2 x 18 1/2	546 x 470	74	1880	25	11
QB3674-1A	36"L Single-Sided Adder	21 1/2 x 36 1/2	546 x 927	74	1880	35	16
QB4874-1A	48"L Single-Sided Adder	21 1/2 x 48 1/2	546 x 1232	74	1880	45	20
Dual Sided — Frames with Dust Cover							
QB1874-2	18"L Double-Sided Starter	40 1/2 x 19 1/2	1029 x 495	74	1880	43	20
QB3674-2	36"L Double-Sided Starter	40 1/2 x 37 1/2	1029 x 953	74	1880	55	25
QB4874-2	48"L Double-Sided Starter	40 1/2 x 49 1/2	1029 x 1257	74	1880	67	30
QB1874-2A	18"L Double-Sided Adder	40 1/2 x 18 1/2	1029 x 470	74	1880	30	14
QB3674-2A	36"L Double-Sided Adder	40 1/2 x 36 1/2	1029 x 927	74	1880	42	19
QB4874-2A	48"L Double-Sided Adder	40 1/2 x 48 1/2	1029 x 1232	74	1880	54	24
Casters and Caster Extension Bars							
QB4B	4" Diameter Brake Caster (Qty. 1)	1 1/4 x 4	32 x 102			7	3
QB18EB	18"D Bar — Single Sided	26 1/8 x 1 1/8	664 x 29	1/2	13	10	5
QB36EB	36"D Bar — Double Sided	44 1/4 x 1 1/8	1124 x 29	1/2	13	13	6
Baskets with Brackets							
QB1218B	12"W x 18"L Basket with Brackets	12 x 18	305 x 457	7	178	7	3
QB1236B	12"W x 36"L Basket with Brackets	12 x 36	305 x 914	7	178	10	5
QB1248B	12"W x 48"L Basket with Brackets	12 x 48	305 x 1219	7	178	13	6
QB1818B	18"W x 18"L Basket with Brackets	18 x 18	457 x 457	7	178	8	4
QB1836B	18"W x 36"L Basket with Brackets	18 x 36	457 x 914	7	178	13	6
QB1848B	18"W x 48"L Basket with Brackets	18 x 48	457 x 1219	7	178	16	7

*Mobile units are intended to be moved for cleaning or relocating. Not designed for transport.

**Levelers add 5/8"-1 3/8" (16-35mm) to overall height for stationary. Caster with extender adds 6" (152mm) and caster only adds 5 1/2" (140mm) H. Basket front inside height is 3" (76mm) H.

qwikSIGHT™ Basket Supply System

Starter Model No.	Adder Model No.	Description	Dimensions (Width x Length)		Height	
			(in.)	(mm)	(in.)	(mm)
Single-Sided Stationary* 6 Level — Three 12" (305mm)W, Three 18" (457mm)W Baskets						
QB118-S6	QB118-S6A	18"L, 6 Basket 3-18, Stationary, Starter	21½	546	74	1880
QB136-S6	QB136-S6A	36"L, 6 Basket 3-18, Stationary, Starter	21½	953	74	1880
QB148-S6	QB148-S6A	48"L, 6 Basket 3-18, Stationary, Starter	21½	1257	74	1880
Single-Sided Stationary* 7 Level — Three 12" (305mm)W, Four 18" (457mm)W Baskets						
QB118-S7	QB118-S7A	18"L, 7 Basket 4-18, Stationary, Starter	21½	546	74	1880
QB136-S7	QB136-S7A	36"L, 7 Basket 4-18, Stationary, Starter	21½	953	74	1880
QB148-S7	QB148-S7A	48"L, 7 Basket 4-18, Stationary, Starter	21½	1257	74	1880
Single-Sided Mobile** 6 Level — Three 12" (305mm)W, Three 18" (457mm)W Baskets						
QB118-M6	QB118-M6A	18"L, 6 Basket 3-18, Mobile, Starter	21½	546	79½	2019
QB136-M6	QB136-M6A	36"L, 6 Basket 3-18, Mobile, Starter	21½	953	79½	2019
QB148-M6	QB148-M6A	48"L, 6 Basket 3-18, Mobile, Starter	21½	1257	79½	2019
Single-Sided Mobile** 7 Level — Three 12" (305mm)W, Four 18" (457mm)W Baskets						
QB118-M7	QB118-M7A	18"L, 7 Basket 4-18, Mobile, Starter	21½	546	79½	2019
QB136-M7	QB136-M7A	36"L, 7 Basket 4-18, Mobile, Starter	21½	953	79½	2019
QB148-M7	QB148-M7A	48"L, 7 Basket 4-18, Mobile, Starter	21½	1257	79½	2019



QB148-S7

Starter Model No.	Adder Model No.	Description	Dimensions (Width x Length)		Height	
			(in.)	(mm)	(in.)	(mm)
Double-Sided Stationary* 6 Level — Six 12" (305mm)W, Six 18" (457mm)W Baskets						
QB218-S12	QB218-S12A	18"L, 12 Basket 6-18, Stationary, Starter	40½	1029	74	1880
QB236-S12	QB236-S12A	36"L, 12 Basket 6-18, Stationary, Starter	40½	953	74	1880
QB248-S12	QB248-S12A	48"L, 12 Basket 6-18, Stationary, Starter	40½	1257	74	1880
Double-Sided Mobile** 6 Level — Six 12" (305mm)W, Six 18" (457mm)W Baskets						
QB218-M12	QB218-M12A	18"L, 12 Basket 6-18, Mobile, Starter	40½	1029	79½	2019
QB236-M12	QB236-M12A	36"L, 12 Basket 6-18, Mobile, Starter	40½	953	79½	2019
QB248-M12	QB248-M12A	48"L, 12 Basket 6-18, Mobile, Starter	40½	1257	79½	2019
Double-Sided Stationary* 7 Level — Six 12" (305mm)W, Eight 18" (457mm)W Baskets						
QB218-S14	QB218-S14A	18"L, 14 Basket 8-18, Stationary, Starter	40½	1029	74	1880
QB236-S14	QB236-S14A	36"L, 14 Basket 8-18, Stationary, Starter	40½	953	74	1880
QB248-S14	QB248-S14A	48"L, 14 Basket 8-18, Stationary, Starter	40½	1257	74	1880
Double-Sided Mobile** 7 Level — Six 12" (305mm)W, Eight 18" (457mm)W Baskets						
QB218-M14	QB218-M14A	18"L, 14 Basket 8-18, Mobile, Starter	40½	1029	79½	2019
QB236-M14	QB236-M14A	36"L, 14 Basket 8-18, Mobile, Starter	40½	953	79½	2019
QB248-M14	QB248-M14A	48"L, 14 Basket 8-18, Mobile, Starter	40½	1257	79½	2019



QB136-M7



QB236-M12

*Levelers add 5/8"-1 3/8" (16 -35mm) to overall height for stationary.

**Mobile units are intended to be moved for cleaning or relocating. Not designed for transport.

**Caster with extender adds 1/2" (13mm) to overall mobile unit height.

Adder Units — deduct 1" (25mm) from unit length.

qwikSIGHT™ Basket Supply System



We put space to work.®




Colored Label Holder (shown with labels)

- QB03LHRD – Red** **QB03LHOR – Orange** **QB03LHYL – Yellow**
- QB03LHGR – Green** **QB03LHBL – Blue** **QB03LHPK – Pink**
- QB03LHCL – Clear**



QB36LHC Clear Label Holder (shown with labels)

Model No.	Description	Dimension (Width x Length) (in.)	(mm)	Height (in.)	(mm)	Approx. Pkd. Wt. (lbs.)	(kg)
Dividers							
QB03D	3"L Divider (Left to Right)	6	152	3	76	.2	.1
QB06D	6"L Divider (Left to Right)	6	152	6	152	.4	.2
QB12D	12"L Divider (Front to Back)	12	305	6	152	.5	.2
QB18D	18"L Divider (Front to Back)	18	457	6	152	.8	.4

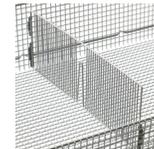

**QB12D
QB18D**

Model No.	Description	Dimension (Width x Length) (in.)	(mm)	Height (in.)	(mm)	Approx. Pkd. Wt. (lbs.)	(kg)
Label Holders							
QB18LHC	18"L Label Holder, Clear (Qty. 1)	17	432	1 1/4	32	.2	.1
QB36LHC	36"L Label Holder, Clear (Qty. 1)	35	889	1 1/4	32	.3	.1
QB48LHC	48"L Label Holder, Clear (Qty. 1)	47	1194	1 1/4	32	.4	.2
QB03LH	3"L Label Holder (Qty. 50) (color)	3	76	1 1/4	32	.6	.3

(Colors and model numbers below)




QB03D



QB06D

Model No.	Description	Dimension (Width x Length) (in.)	(mm)	Height (in.)	(mm)
Louvered Panel Mounting Brackets					
QB18WPBRKT	18"L Frame Mounting Bracket	1 x 18 1/4	26 x 464	5	127
QB36WPBRKT	36"L Frame Mounting Bracket	1 x 36 1/4	26 x 921	5	127

Model No.	Description	Dimension (Width x Length) (in.)	(mm)	Height (in.)	(mm)
Louvered Panel and Accessories					
QB1819WP	18" x 19" Louvered Panel	18	457	19	483
QB1861WP	18" x 61" Louvered Panel	18	457	61	1549
QB3619WP	36" x 19" Louvered Panel	36	914	19	483
QB3661WP	36" x 61" Louvered Panel	36	914	61	1549
QB09WPS	9" Light-Duty Spike — Single Rod	9	229		
QB10WPS	10" Light-Duty Spike — Dual Rod	10	254		
QB12WPS	12" Equipment Spike — Heavy Duty	12	305		
QB1218	12" x 18" Basket	12 x 18	305 x 457	7	178
QB1236	12" x 36" Basket	12 x 36	305 x 914	7	178
QB1248	12" x 48" Basket	12 x 48	305 x 1219	7	178
QB1818	18" x 18" Basket	18 x 18	457 x 457	7	178
QB1836	18" x 36" Basket	18 x 36	457 x 914	7	178
QB1848	18" x 48" Basket	18 x 48	457 x 1219	7	178

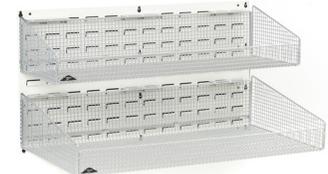

**QB3619WP with
One QB1236
One QB1836**



QB09WPS



QB10WPS



QB12WPS

Model No.	Description	Dimension (Width x Length) (in.)	(mm)	Height (in.)	(mm)
Shelves with Brackets					
QB1818SS	18" x 18" Slanted Shelf	18 x 18	457 x 457	10	252
QB1836SS	18" x 36" Slanted Shelf	18 x 36	457 x 914	10	252

